

# ***Brandt***

GUIDE TO INSTALLATION AND USE

## **Washing Machine**



## **Congratulations to your new machine !**

This user manual will help you discover all the benefits of your machine and use it the way you want.



We strongly recommend that you read this manual carefully before using the washing machine for the first time. It contains important safety instructions and information relating to the installation, operation and maintenance. Proper handling contributes to efficient, environmentally friendly and safe use and minimises energy consumption during operation. Please always keep the proof of purchase to preserve any warranty claims.

These instructions for use are in general terms. This means: Certain functions apply to your machine, while others do not. We are continuously working on the further development and improvement of our unit types and models. Therefore, we reserve the right to make changes to the design, features and accessories of all types and models without prior notice.

## **Explanation of symbols**



### **Danger**

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



### **Warning of electrical voltage**

This symbol indicates that there is a danger to life and health of persons due to voltage.



### **Warning**

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



### **Caution**

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



### **Notice**

The signal word indicates important information (e.g. damage to property), but not danger.



### **Observe instructions**

Notes with this symbol indicate that you should read the operating instructions carefully.



### **Observe instructions**

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

# CONTENTS

---

<b>1 SAFETY INSTRUCTIONS .....</b>	<b>3</b>	<b>4 MAINTENANCE .....</b>	<b>32</b>
1.1 Safety Instructions .....	3	4.1 Cleaning and Care .....	32
		Cleaning the washing machine.....	32
<b>2 INSTALLATION .....</b>	<b>11</b>	Cleaning the Drum .....	32
2.1 Product Description .....	11	Cleaning the Door Seal and Glass..	32
Accessories .....	11	Cleaning the Inlet Filter .....	33
2.2 Installation .....	12	Cleaning the Detergent Dispenser..	34
Installation area .....	12	Cleaning the Microfiber Catcher.....	35
Unpacking the machine.....	13	Cleaning the Drain Pump Filter.....	36
Remove transport bolts .....	13	4.2 Trouble Shooting.....	37
Levelling the machine.....	14	4.3 Customer Service.....	38
Connect the water supply hose	14		
Drain Hose .....	14	<b>5 TECHNICAL SPECIFICATION .....</b>	<b>39</b>
Acoustic Sponge .....	15		
<b>3 OPERATION .....</b>	<b>16</b>		
3.1 Quick Start .....	16		
3.2 Before Each Washing .....	19		
3.3 Detergent Dispenser .....	20		
Detergent Recommendation .....	21		
3.4 Control Panel .....	22		
3.5 Display .....	23		
3.6 Programmes.....	24		
3.7 Option.....	28		

# 1 SAFETY INSTRUCTIONS

---

## INTENDED USE

The product is intended only for home use and for textiles in household amounts suitable for washing. This appliance is for indoor use only and not intended for built in use. Only use according to these instructions. The appliance is not intended for commercial use.

Any other use is considered as improper use. The producer is not responsible for any damage or injuries that may result of it.

- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments;
  - Areas for communal use in blocks of flats or in launderettes.

## ■ 1.1 Safety Instructions

Please read the following safety information thoroughly and follow it strictly to minimize the risk of fire or explosion, electric shock and to prevent property damage, personal injury or loss of life. Failing to follow these instructions shall void any warranty.

### **Warning!**

This combination of symbol and signal word indicates a potentially dangerous situation which may result in death or serious injuries unless it's avoided.

### **Caution!**

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries or damage to property and the environment.

### **Note!**

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries.

# 1 SAFETY INSTRUCTIONS

---

## **Warning!**

---

### **ELECTRIC SHOCK HAZARD**

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If the machine is damaged, it must not be operated unless repaired by the manufacturer, its service agent or similarly qualified persons.
- Risk of electric shock!
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised that they do not play with the appliance.
- Children 3 years and under shall be kept away from the appliance or continuously supervised.
- Animals and children may climb into the machine. Check the machine before every operation.
- Do not climb or sit on the appliance.

# 1 SAFETY INSTRUCTIONS

---

## INSTALLATION LOCATION AND SURROUNDING

- All washing and additional substances are to be kept in a safe place out of the reach of children.
- Do not install the machine on a carpet floor.
- The obstruction of the openings by a carpet can damage the machine.
- Keep the appliance clear from heating sources and direct sunlight to avoid plastic and rubber parts to corrode.
- Do not use the appliance in humid environments or rooms containing explosive or caustic gas. In case of water leakage or water splashes let the appliance dry in the open air.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the washing machine .
- Do not operate the machine in rooms with a temperature of below 5°C. This can cause damages to parts of it. If it is unavoidable, make sure to drain the water completely from the appliance after every use (see “Maintenance - Cleaning of drain pump filter”) to avoid damages caused by frost.
- Never use flammable sprays or substances in the immediate proximity of the appliance.

# 1 SAFETY INSTRUCTIONS

---

## INSTALLATION

- Remove all packaging material and transport bolts before using the appliance. Otherwise, serious damage may result.
- This appliance is equipped with a single inlet valve and can be connected to the cold water supply only.
- Mains plug must be accessible after installation.
- Before washing clothes for the first time, the product shall be operated once throughout all the procedures without any clothes inside. Before using the washing machine, the product shall be calibrated.
- Do not put any excessively heavy objects on the appliance, like water containers or heating devices.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- Max. Inlet water pressure 1 MPa. Min. inlet water pressure 0.05 MPa.

## ELECTRICAL CONNECTION

- Make sure the supply cable is not trapped by the machine, it can get damaged.
- Connect the product to a grounded outlet protected by a fuse complying with the values in the “Technical specifications” table. The grounding installation has to be made by a qualified electrician. Ensure that the machine is installed in accordance with the local

# 1 SAFETY INSTRUCTIONS

---

regulations.

- Water and electrical connections must be carried out by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.

## **Warning!**

- Don't use multiple plugs or extension cords.
- The appliance must not have an external switching device such as a timer or connected to a circuit that is regularly switched on and off.
- Do not pull the plug out of the mains outlet if there is flammable gas around.
- Never pull out power plug with wet hands.
- Always pull at the plug, not at the cable.
- Always unplug the appliance if it is not being used.

## **WATER CONNECTIONS**

- Check the connections of the water inlet tubes, the water tap and the outlet hose for possible problems due to changes of water pressure. If the connections loosen or leak, close the water tap and get it repaired.
- Do not use the appliance before the pipes and hoses are installed properly by qualified persons.
- Glass door may become very hot during the operation. Keep children and pets far away from the machine while it is operating. The water inlet and outlet hoses have to be safely installed and remain undamaged.
- Otherwise, water leakage can occur.



# 1 SAFETY INSTRUCTIONS

---

- Do not remove the drain pump filter while there is still water in the appliance. Big quantities of water can leak out, and there is a risk of scalding due to hot water.

## OPERATION AND MAINTENANCE

- Never use any flammable, explosive or toxic solvents. Do not use gasoline and alcohol etc. as detergents. Only select detergents that are suitable for machine washing.
- Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws, stones etc. may cause serious damages to this machine.
- Remove all objects from pockets such as lighters and matches before use the appliance. Thoroughly rinse items that have been washed by hand.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, wax and wax removers should be washed in hot with an extra amount of detergent before being dried in the appliance.
- Items containing foam rubber (latex foam), shower caps, water proof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be washed in the machine.
- Fabric softeners or similar products should be used are recommended in their instructions. Never try to open the door forcefully.

# 1 SAFETY INSTRUCTIONS

---

- The door will unlock shortly after the end of a cycle.
- Please do not close the door with excessive force. If it is found difficult to close the door, please check if the clothes are properly inserted and distributed.
- Always unplug the appliance and close the water tap before cleaning and maintenance and after each use.
- Never pour water over the appliance for cleaning purpose. Risk of electric shock!
- Repairs shall only be carried out by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The producer will not be responsible for damages caused by the intervention of not authorized persons.

## TRANSPORT

- Before Transport:
  - Bolts shall be reinstalled to the machine by a specialized person;
  - Accumulated water shall be drained out of the machine.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door can not be used as a handle.

# 1 SAFETY INSTRUCTIONS

## ENVIRONMENT

Disposal of old appliances  
(Only for EU countries)

This appliance is labelled in accordance with the European Directive 2012/19/EU on waste electrical and electronic equipment (WEEE). The directive provides the framework for the EU-wide take-back and recycling of waste equipment.



**The devices marked with this symbol  
must not be disposed of in household waste!**



As a manufacturer, we ensure environmentally friendly treatment and recycling of old appliances within the scope of product responsibility. Our products are registered with the authorities for electrical appliances and packaging. For further information on collection and disposal, please contact your local authority, city council or your

(specialised) retailer. Already during the development of new appliances, we pay attention to a high recyclability of the materials used. High recycling rates are achieved via the take-back system to reduce the burden on waste dumps and the environment. Together, we are making an important contribution to environmental protection.

Model	Washing Capacity
WFB424QWA	12.0kg

## 2 INSTALLATION

### ■ 2.1 Product Description

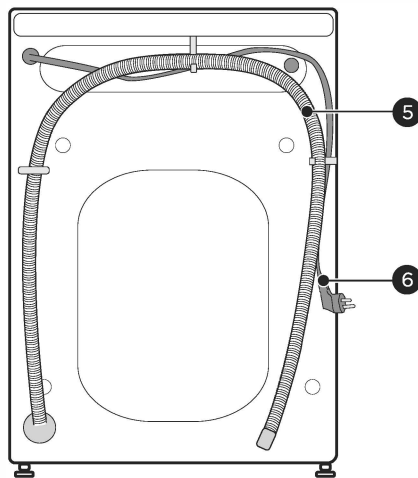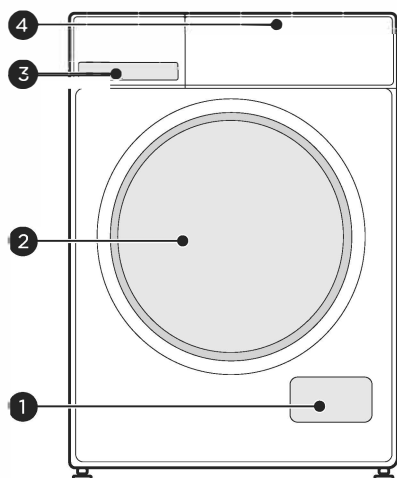

1 Service flap

2 Door

3 Detergent dispenser

4 Control panel

5 Drain hose


6 Power supply cord




#### Note!

- The product picture is for illustration only, please refer to real product as reference.

#### Accessories

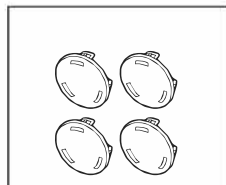

4 x Cover  
caps

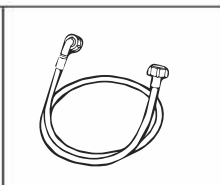

1 x Supply hose  
cold water



1 x Owner's  
manual




Acoustic sponge

## 2 INSTALLATION

### ■ 2.2 Installation



#### Tools Needed If Installation By Yourself (not include)

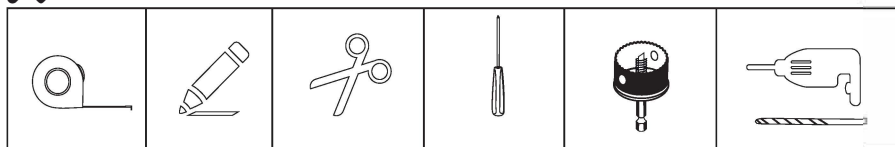

#### Installation area

##### **Warning!**

- Stability is important to prevent the product from wandering!
- Make sure the machine is standing leveled and stable.
- Make sure that the product does not stand onto the power cord.
- Make sure to maintain the minimum distances from the walls as shown in the picture.

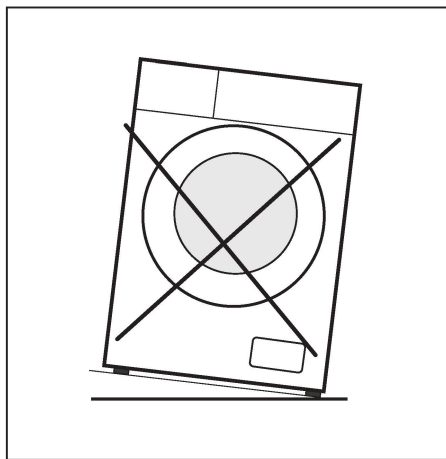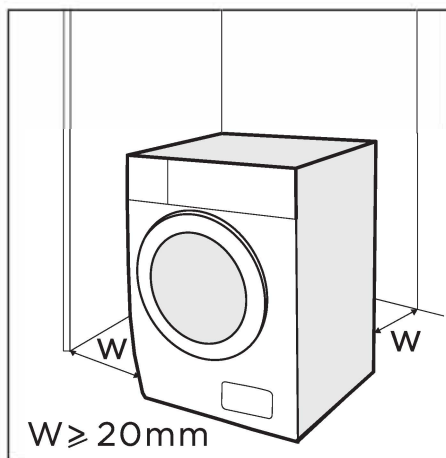


Before installing the machine, the location characterized as follows shall be selected:

1. Rigid, dry, and level surface.
2. Avoid direct sunlight.
3. Sufficient ventilation.
4. Room temperature is above 5°C.
5. Keep far away from the heat sources such as coal or gas burning appliances.

## 2 INSTALLATION

### Unpacking the machine

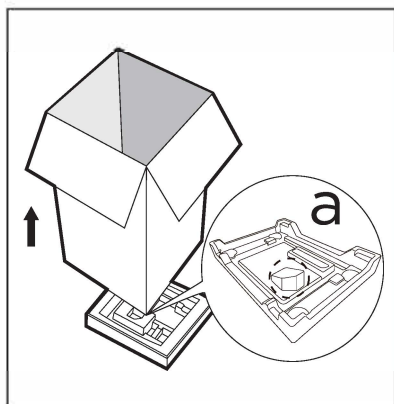

#### **Warning!**

- Packaging material (e.g. Films, Styrofoam) can be dangerous for children.
- There is a risk of suffocation ! Keep all packaging well away from children.

1. Remove the cardboard box and styrofoam packing.
2. Lift the washing machine and remove the base packaging. Make sure the small triangle foam (a) is removed with the bottom packaging together.  
If not, lay the unit down on the side surface and remove it manually.
3. Remove the tape securing the power supply cord and drain hose.
4. Remove the inlet hose from the drum.


### Remove transport bolts

#### **Warning!**


- You must remove the transport bolts from the backside before using the product.



Loosen the 4 transport bolts with a spanner.

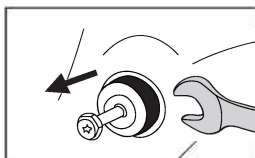

Remove the bolts including the rubber parts and keep them for future use.

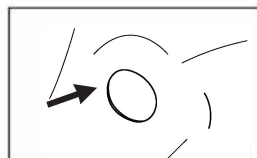


Close the holes using the cover caps.

## 2 INSTALLATION

### Levelling the machine

#### **Warning!**

- The lock nuts on all four feet must be screwed tightly against the housing.

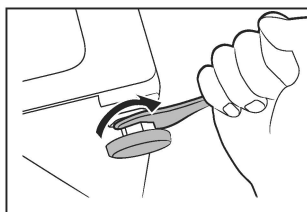


1. Loosen the lock nut.
2. Turn the foot until it reaches the floor.
3. Adjust the legs and lock the nuts with a spanner. Make sure the machine is level using a spirit level.

### Connect the water supply hose


#### **Warning!**

To prevent leakage or water damage, follow the instructions in this chapter.

- Do not kink, crush or modify water inlet hose.

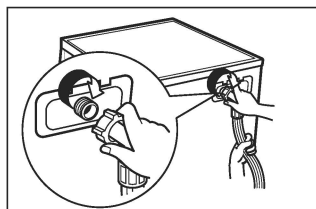

Connect the water supply hose to the water inlet valve and a water tap with cold water as indicated.

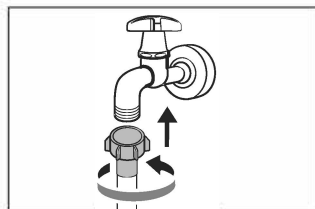

#### **Note!**

- Connect manually, do not use tools. Check if the connections are tight.


### Drain Hose

#### **Warning!**


- Do not kink or protract the drain hose.
- Position drain hose properly ,otherwise damage might result of water leakage.
- It is not allowed to remove the buckle of drain pipe.

## 2 INSTALLATION

There are two ways to place the end of drain hose:

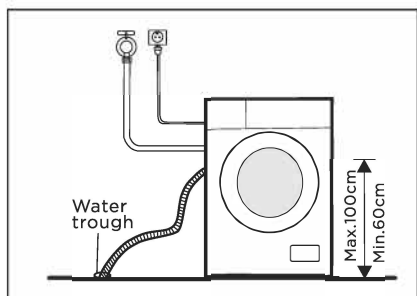

1.Put it into the water trough.


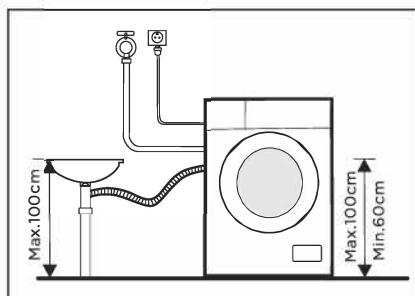


2.Connect it to the branch drain pipe of the trough.

### Acoustic Sponge

#### Note!

- Please make sure to assemble the acoustic sponges, which can effectively reduce the noise caused by the machine while working, in order to provide you with a more peaceful and quiet living environment.

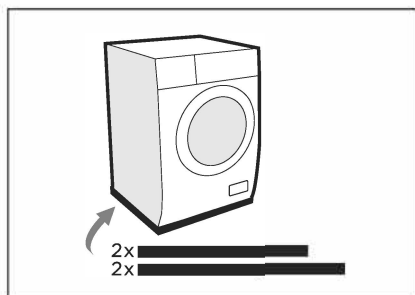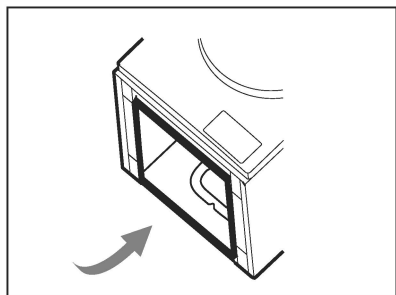

1. Get the machine laid on the floor, using some soft material like foam or clothes between the machine and floor for a protection.
2. Stick the 2x longer sponges to the longer bottom edges of machine, and the 2x shorter sponges to the shorter bottom edges.



## 3 OPERATION

---

### ■ 3.1 Quick Start








#### **Caution!**

- Before washing, please make sure the washing machine is installed properly.
- Your appliance was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odors, it's recommended to clean your appliance before first use. For this reason, recommended to clean the inner drum by running the "Drum Clean" or other program with the optional temperature of 90 °C. Be careful not to put laundry and detergent in the machine.

# 3 OPERATION


## 1. Before Washing

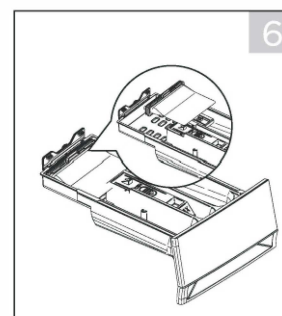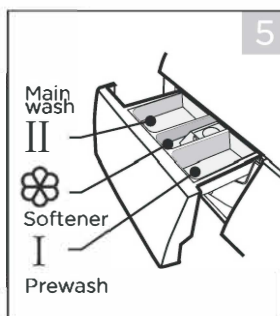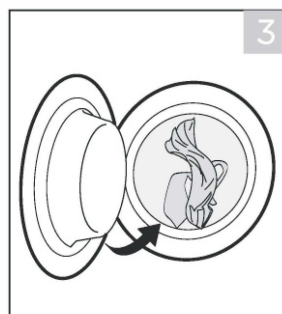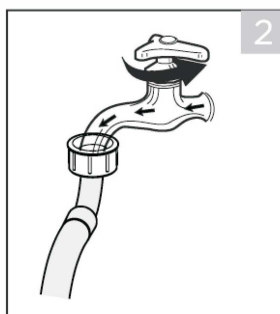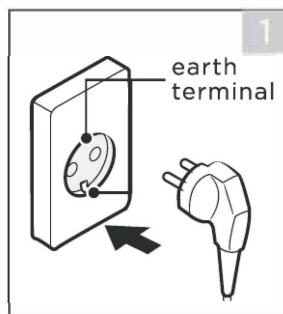


# 3 OPERATION

---


## 2. Washing

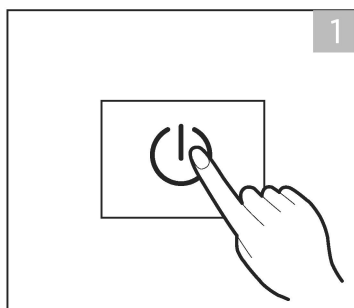


Power on

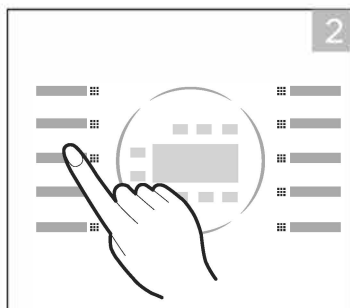

Select programme

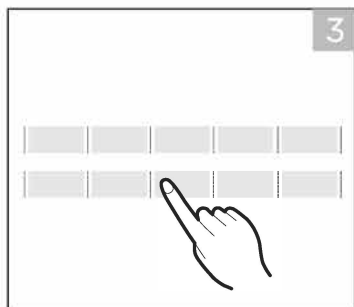

Select function or remain default settings

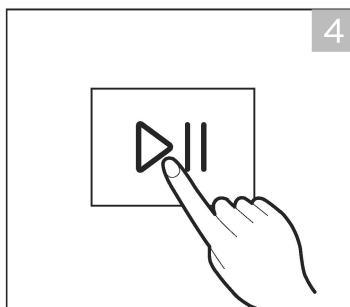

Press Start/Pause to start the program


## 3. After Washing

Buzzer beep and “End” on display.


# 3 OPERATION

## 3.2 Before Each Washing


- The ambient temperature of the machine should be 5°C-40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the detergent use instructions before wash. Use non-foaming or less-foaming detergent suitable for washing machine properly.

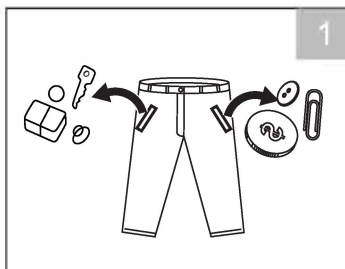


Take all items out of the pockets

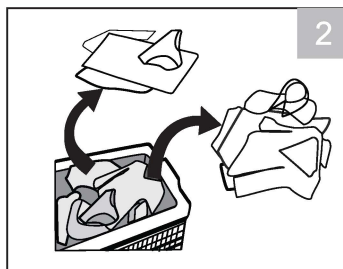

Sort laundry according to color and textile type

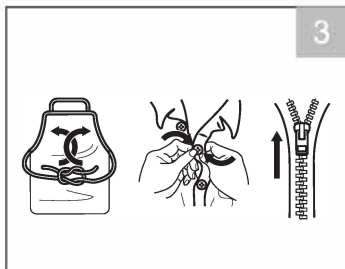

Tie together long textile strips and belts, close zips and button

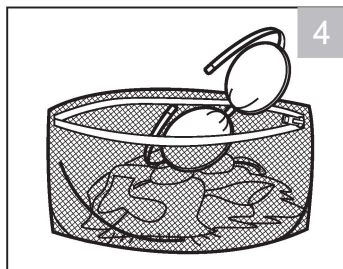

Put small items into a laundry bag


### **Warning!**

- It is prohibited to wash clothes that adhere to any volatile or flammable substance such as cleaning agent, dry cleaning agent, spot remover, acetone, gasoline, kerosene, beauty oil, massage oil, animal oil, machinery oil, dry cleaning oil, volatile agent, alcohol, turpentine, wax, wax remover, banana water, disinfectant tablets, resin, etc.
- Washing single clothes items may easily create big eccentricity . Therefore it is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.
- Do not wash, or spin water-proof seats, mats, or clothing.

# 3 OPERATION

## 3.3 Detergent Dispenser

- I Pre wash
- II Main wash
- ☼ Softener
- ⏏ Release button to pull out the dispenser

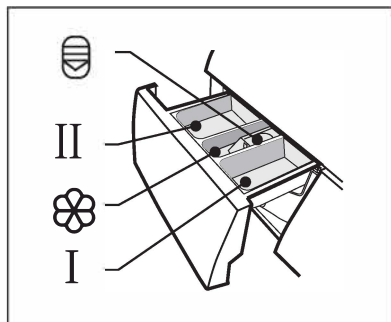

### ⚠ Caution!

- Detergent only need to be added in “compartment I ”after selecting PreWash function.

Programme	I	II	☼	Programme	I	II	☼
Cotton	○	●	○	Quick 59'		●	○
Synthetic	○	●	○	Delicate		●	○
Sports	○	●	○	Cotton ECO		●	○
Mix	○	●	○	Wool		●	○
20°C Care+	○	●	○	Spin Only			
				Drum Clean			

● Means must      ○ Means optional

# 3 OPERATION

## Detergent Recommendation

Recommended washing detergent	Type of laundry and textile	Wash cycles	Washing temp. °C
Heavy-duty detergent with bleaching agents and optical brighteners	White laundry made from boil-proof cotton or linen	Cotton, Cotton ECO, Mix	40
Colour detergent without bleaching agent and optical brighteners	Coloured laundry made from cotton or linen	Cotton, Cotton ECO, Mix, Sports	40
Color or mild detergent without optical brighteners	Coloured laundry made from easy care fibres or synthetic materials	20°C Care+	20
Mild washing detergent	Delicate textiles, silk, viscose	Quick 59'	30

### **Note!**

- Agglomerating or ropy detergent or additive can be diluted in some water before pouring it into the detergent dispenser, to avoid its inlet to get blocked and thus cause a water overflow.
- Please choose the suitable type of detergent to get a maximum of washing performance and a minimum of water and energy consumption.
- **To achieve the best cleaning result a proper detergent dosing is important. Use only LOW SUDS detergent**
- Use a reduced detergent amount if the drum is not filled completely.
- Always adjust the amount of detergent to the water hardness, if your tap water is soft, use less detergent.
- Dose according to how dirty your laundry is, less dirty clothes require less detergent.
- Highly concentrated (compact detergent) requires particularly accurate dosing.

Following symptoms are a sign of detergent overdosing:


- heavy foam formation
- poor washing and rinsing result

Following symptoms are a sign of detergent underdosing:

- laundry turns grey
- built-up of limescale deposits on the drum, the heating element and/or the laundry

## 3 OPERATION

### 3.4 Control Panel

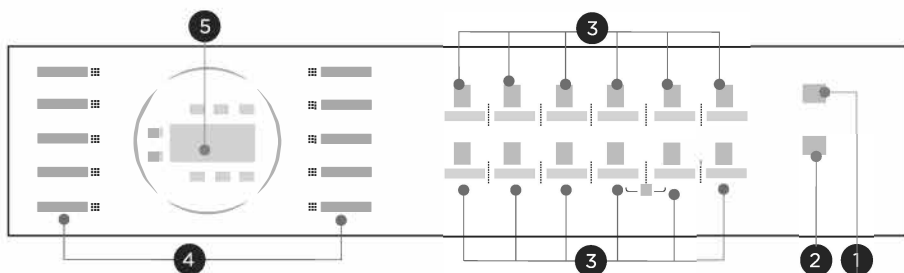

#### 1 Power

Product is on/off.

#### 2 Start/Pause

Press the button to start or pause the washing cycle.

#### 3 Option

This allows you to select an additional function and will light when selected.

#### 4 Programmes


Available according to the laundry type.

#### 5 Display

The display shows the settings, estimated time remaining, options, and status messages for your washer. The display will remain on through the cycle.

# 3 OPERATION

## 3.5 Display

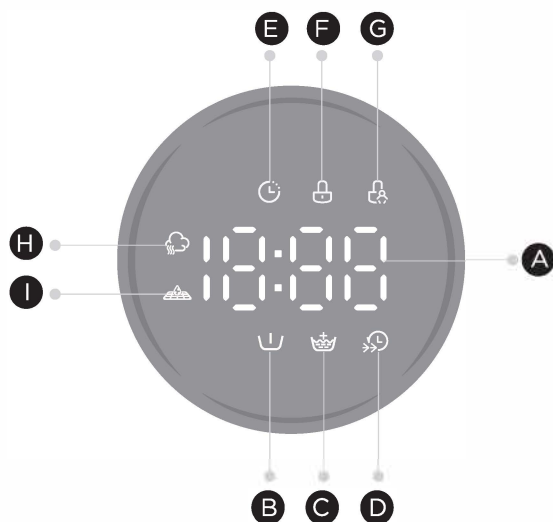

### A Display

Wash Time  
125  
Speed  
600  
End  
End

Delay Time  
2H  
Error  
E30  
Temp.  
30

### B PreWash

### C Rinse+

### D Boost

### E Delay End

### F Door Lock

### G Child Lock

### H Steam

### I Microfiber Filtering Feature



## 3 OPERATION

### ■ 3.6 Programmes

Programmes are available according to the laundry type.

Programmes	
Cotton	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.
Synthetic	Wash synthetic articles, for example: shirts, coats, blending. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.
Mix	Mixed load consisting of textiles made of cotton and synthetics.
20 °C Care+	Able to clean lightly soiled cotton laundry, at a nominal temperature of 20 °C.
Cotton ECO	Able to clean normally soiled cotton laundry declared to be washable at 40 °C or 60 °C, together in the same cycle.
Delicate	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics.
Quick 59'	Washing few and not very dirty clothes quickly.
Sports	Washing the activewear.
Drum Clean	Specially set in this machine to clean the drum and tube. It applies 90 °C high temperature sterilization to make the clothes washing more green. When this programme is performed, the clothes or other washing cannot be added. When proper amount of chlorine bleaching agent is put in, the barrel cleaning effect will be better. The customer can use this programme regularly according to the need.
Wool	Hand or machine-washable wool or richwool textiles. Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash longer).
Spin Only	Spins and drains the water.

### 3 OPERATION

---

Programme	Load(kg)	Default Time
	12.0	10.0
Cotton	12.0	3:39
Synthetic	6.0	3:18
Sports	12.0	0:47
Mix	12.0	1:20
20°C Care+	6.0	1:08
Quick 59'	6.0	0:59
Delicate	3.0	0:50
Cotton ECO	12.0	4:00
Wool	2.0	1:07
Spin Only	12.0	0:12
Drum Clean	-	1:18



#### **Note!**

- The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.

### 3 OPERATION

#### WFB424QWA

Cycle	Nominal capacity in kg	Temperature setting	Cycle duration in h:min	Energy consumption in kWh/cycle	Water consumption in L/cycle	Highest washing temperature °C <sup>1)</sup>	Residual moisture in % / Spin speed <sup>2)</sup>
Cotton	12.0	60	3:44	1.919	99	60	53%/1400
20°C Care+	6.0	20	1:08	0.218	58	20	65%/1000
Mix	12.0	40	1:20	0.988	99	40	70%/800
Synthetic	6.0	40	3:18	0.844	58	40	35%/800
Quick 59'	6.0	30	0:59	0.402	58	30	65%/1000
Cotton ECO	12.0	—	4:00	1.168	83.0	42	53.9%/1350
	6.0	—	3:12	0.638	58.0	32	53.9%/1350
	3.0	—	3:12	0.253	46.0	23	53.9%/1350

- The above data is for reference only, and the data may change due to different actual use conditions.
- The valves given for programmes other than the Cotton ECO programme are indicative only.
- 20°C Care+ programme is able to clean lightly soiled cotton laundry, at a nominal temperature of 20 °C, which complies with the regulation (EU) 2019/2023.
- Concerning to EN 60456:2016/prA2019 With (EU) 2019/2014, (EU) 2019/2023, (EU)2021/340, (EU) 2021/341.

The EU energy efficiency class is: A

Energy test program: Cotton ECO Other as the default.

Half load for 12.0kg machine:6.0kg.

Quarter load for 12.0kg machine:3kg.

For WELS (Water Efficiency Labeling Scheme)

Singapore,Cotton ECO is the recommended program

designed to minimize water consumption for normally soiled load at rated capacity.

### 3 OPERATION

---

- 1) The highest temperature reached by the laundry in the wash cycle for at least 5 minutes.
- 2) Residual moisture after the wash cycle in water content percent and the spin speed at which this was achieved.
- 3) The Cotton ECO programme is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle. This programme is used to assess the compliance with the regulation (EU) 2019/2014, (EU) 2019/2023, (EU)2021/340, (EU) 2021/341.

The most efficient programmes in terms of energy consumption are generally those that perform at lower temperatures and longer duration.

Loading the household machine up to the capacity indicated for the respective programmes will contribute to energy and water savings.

Noise and remaining moisture content are influenced by the spinning speed: the higher the spinning speed in the spinning phase, the higher the noise and the lower the remaining moisture content.



#### **Caution!**

- If there is any break in the power supply while the machine is operating, a special memory stores the selected programme. The machine will continue the programme when the power supply is re-established.

## 3 OPERATION

### 3.7 Option

Cycle	Default Temp.(°C)	Default spin speed in rpm	Additional functions
Cotton	40	800	Soil Level Wash
Synthetic	40	800	Soil Level Wash
Sports	20	800	Soil Level Wash
Mix	40	800	Night Wash
20°C Care+	20	1000	Soil Level Wash
Quick 59'	30	1000	Night Wash
Delicate	30	800	Soil Level Wash
Cotton ECO	--	--	
Wool	40	600	Night Wash
Spin Only	--	1000	Night Wash
Drum Clean	90	--	Night Wash

#### Note!

- For the maximum spin speed, program time, and other details of the Cotton ECO program, please refer to the content on the Product Fiche page.
- The table shows which cycle offers which options for adjustment.

### 3 OPERATION

Temp.

#### Temp.

When needed, the washing temperature can be adjusted by pressing the temperature button in the following steps:  
Cold - 20°C - 30°C - 40°C - 60°C - 90°C.

Speed

#### Speed

When needed, the spinning speed can be adjusted pressing the Speed button in the following steps:  
1400 : 0-600-800-1000-1200-1400

Delay End

#### Delay End

1. Select a programme
2. Press the Delay button to choose the delaying time 0-24H
3. Press [Start/Pause] to start the delay operation



Choose programme    Setting time    Start

To cancel the Delay function, press the “Delay” button before starting the program until the display shows 0 H. If the program has already started, switch the appliance off and afterwards on and select a new programme.



#### PreWash

Extra washing function before the main washing cycle starts to increase the washing performance.



#### Microfiber Catcher

A filter is available for removing fibres coming off of your synthetic clothes or clothes with synthetic fabric from the water that can be fitted in and out of the detergent drawer. Microfibers and other solid particles are separated by the thin filter.

The filtering feature runs on Synthetic, Sports programmes\*.

Filtering process is carried out automatically during the programme. Filtering is carried out before discharge steps in the programme in your washing machine.

The feature is helping to respect our rivers and oceans by preventing plastic microfibres from being released into our precious water sources.\*Programmes may vary depending on the model you purchased.



#### Note!

Do not wash your clothes with cotton and wool in programmes where this feature is active. Use liquid or capsule detergents for extending filtering lifecycle in programmes with filtering feature. When the icon of Microfiber Filtering Feature is flash, pls clean Microfiber Catcher, and press [Reset] button for 3 sec. .

### 3 OPERATION

---

Reset

#### Reset

After the machine runs to the set counting period(counting cycle is 25 times), Reset button flashes at the end of the last program, reminding the user to clean Microfiber Catcher.  
Number of washing cycles will be recounted after press Reset button.  
Skip the reminder:  
1.Press and hold the Reset button for 3sec., Reset indicator reminder will be cancelled and washing cycles will be recounted for another 25 cycles.



#### Rinse+

The laundry will undergo an extra rinse after selecting this function.



#### Boost

The function can decrease the washing time.



#### Steam

The vapour can deeply penetrate the fiber, which effectively eliminate bacterias and germs, preventing odors and protecting your health.

Soil Level

#### Soil Level

The washing time will increase or decrease after you select it.

Night Wash

#### Night Wash

Select this function,if spin speed is more than 800rpm , then change to 800rpm,meanwhile cancel the button sound.

Drum Clean

#### Drum Clean

After the machine runs to the set counting period(counting cycle is 25 times), Drum Clean lamp flashes at the end of the last program, reminding the user to run the program by:  
1.Remove the clothes and close the door.  
2.Press [ Drum Clean].  
3.Press [ Start / Pause].  
Number of washing cycles will be recounted when drum clean program is finished.  
Skip the reminder:  
1.Press and hold the Drum Clean button for 3sec., drum cleaner indicator reminder will be cancelled and washing cycles will be recounted for another 25 cycles.

### 3 OPERATION



#### Child Lock

This function is meant to keep children from misusing the controls.

Reset

Soil Level



Press [Reset] and [Soil Level] simultaneously for 3 sec. until the buzzer beep. The child lock indicator switches on.



#### Caution!

When the Child Lock is activated, the display will alternately show "CL" and the remaining time. Pressing any other button will cause the Child Lock indicator to flash.

When the program ends, "CL" and "End" will alternate on the display.

The Child Lock deactivates the function of all buttons except the On/Off button and the Child lock button! Only the simultaneous pressing of the two buttons [Reset] and [Soil Level] can deactivate the Child Lock! Please deactivate the Child Lock before selecting a new program!

3' Reload

#### Reload

This operation can be executed during the washing progress. When the drum is still rolling and there is large amount of water with high temperature in the drum, the state is unsafe and the door cannot be opened forcefully.

To press [3' Reload] for 3 sec. to reload, and start the clothes adding in the midway function.

Please follow the steps as bellow:

1.Wait until the drum stops rotation.

2.The door lock is unlocked.

3.Close the door when the clothes are reloaded and press the [▷||] button.



Press[3' Reload]3sec. Reload the clothes Start



#### Caution!

- Don't use the Reload function when the water level over the edge of the inner tub or the temperature is higher.



## 4 MAINTENANCE

### ■ 4.1 Cleaning and Care


#### ⚠ Warning!

- Always unplug the appliance and close the water tap before cleaning and maintenance.
- When cleaning the product, do not stretch your hands, feet or arms into the bottom of the machine case to prevent scratches.

#### Cleaning the Washing Machine

Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a towel to wipe it off immediately.

Never use sharp items to clean the appliance.

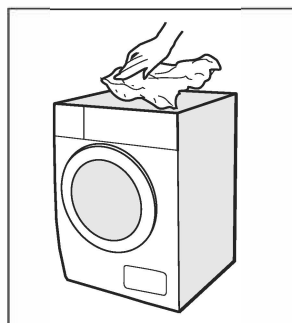

#### ⚠ Caution!

- Never use abrasive or caustic agents, formic acids or its diluted solvents or similar substances, like alcohol or chemical products.

#### Cleaning the Drum

Any rust stains left inside the drum by metal articles must be removed immediately using chlorine-free detergents. Never use steel wool for cleaning the drum!


#### 📌 Note!

- Keep any laundry away from the machine while cleaning the drum.

#### Cleaning the Door Seal and Glass

Wipe the glass and seal after each wash to remove lint and stains. If lint builds up it can cause leakages.

Remove any coins, buttons and other objects from the seal after each wash. Clean the Door Seal and Glass every month to ensure the normal operation of the appliance.

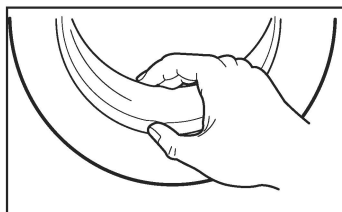


## 4 MAINTENANCE


### Cleaning the Inlet Filter

**Note!**


- Diminishing water flow is a sign that the filter need to be cleaned.

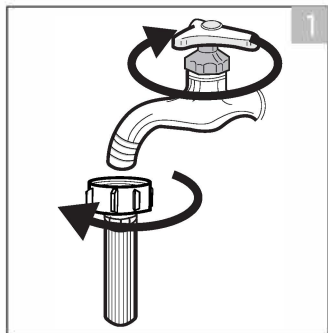


1. Close the tap and remove the water supply hose from it.

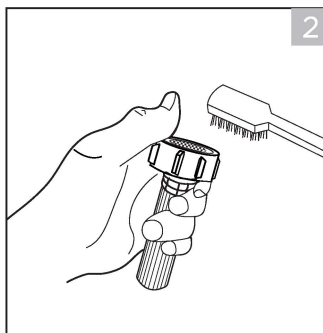

2. Clean the filter with a brush.

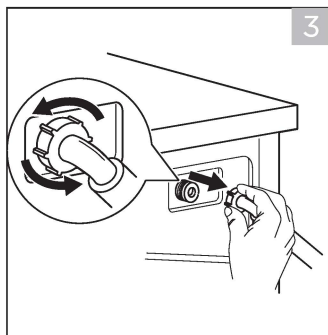

3. Unscrew the water supply hose from the backside of the machine. Pull out the filter with long nose pliers.

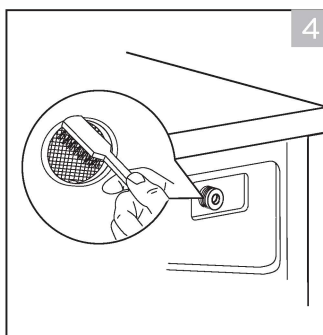


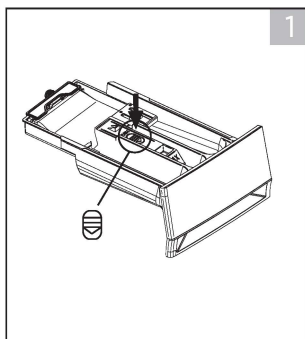
4. Use a brush to clean the filter.

5. Reinstall the filter to the water inlet and reconnect the water supply hose.  
6. Clean the Inlet filter every 3 months to ensure the normal operation of the appliance.


## 4 MAINTENANCE

### Cleaning the Detergent Dispenser


1. Press down the release [  ] on the softener cover and pull the dispenser drawer out of the recess. Clean the inside of the recess with a brush.
2. Lift the softener cover off the dispenser drawer and wash both items with water.
3. Restore the softener cover and push the drawer back into the recess.




Press the release and remove the dispenser drawer

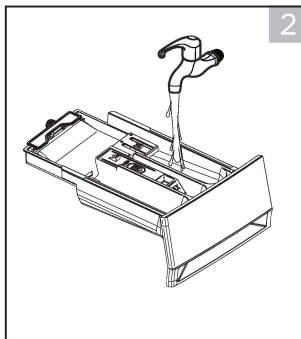

Clean the dispenser drawer and the softener cover under water

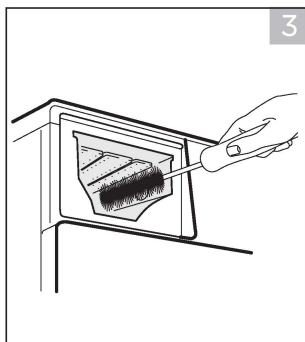

Clean the recess with a soft brush

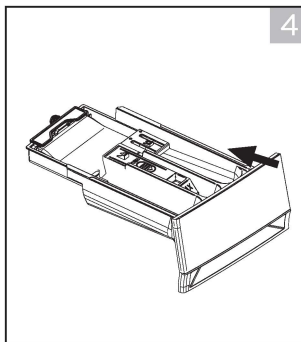

Insert the dispenser drawer


#### **Note!**

- Do not use abrasive or caustic agents to clean plastic parts.
- Clean the detergent dispenser every 3 months to ensure the normal operation of the appliance.


## 4 MAINTENANCE

### Cleaning the Microfiber Catcher


When the icon of Microfiber Filtering Feature is flash, pls clean Microfiber Catcher. Turn off the warning by pressing [Reset] function for 3 seconds to reset.

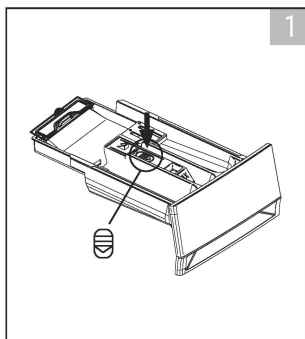


Press the release and remove the dispenser drawer

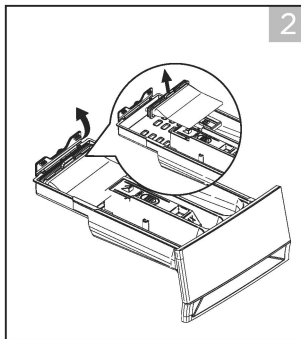

Flip the cover and remove microfiber catcher

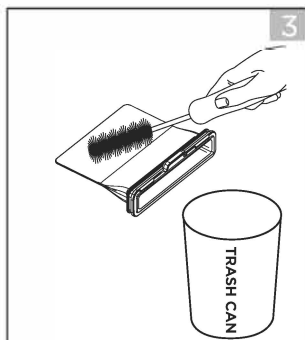

Clean the inside of microfiber catcher with a soft brush

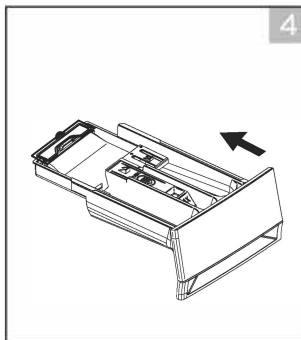

Assemble the microfiber catcher to the dispenser drawer and fit it back

#### Note!


- Do not clean microfiber catcher directly under the faucet, garbage needs to be placed in the trash can.
- The lifetime of microfiber catcher is 24 months, and for the restock, microfiber catcher with package is provided for after sales, and users can purchase as their demands.

## 4 MAINTENANCE


### Cleaning the Drain Pump Filter

#### **Warning!**


- Make sure that the machine has finished the washing cycle and is empty. Switch it off and unplug it before cleaning the drain pump filter.
- Be careful of hot water. Wait for water cooling down. Risk of scalding!
- Clean the filter periodically every 3 months to ensure the normal operation of the appliance.

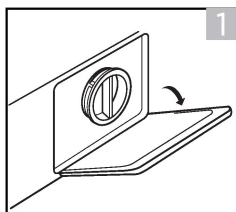


Open the lower cover cap

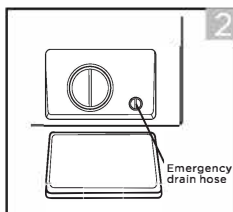


Rotate 90°C and pull out the emergency drain hose, and take off the hose cap

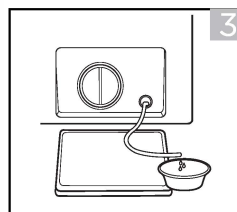


After water runs out, reset the drain hose

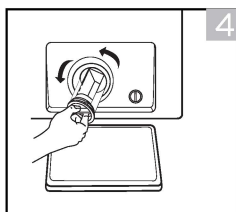

Open the filter by turning to the counter clockwise

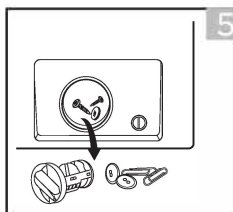

Remove extraneous matter

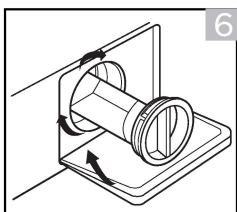

Close the lower cover cap

#### **Caution!**

- Make sure that valve cap and emergency drain hose are reinstalled properly, cap plates should be inserted aligning to hole plates otherwise water may leak.
- Some machines don't have emergency drain hose, so step 2 and step 3 can be skipped. Rotate lower cover cap directly to make water run into basin.
- When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely re-tightened.

## 4 MAINTENANCE

### ■ 4.2 Trouble Shooting

Whenever there is a problem with the appliance, check if you can solve it following the tables below. If the problem persists, please contact the customer service.

Description	Possible cause	Solution
Appliance does not start	Door is not closed properly. Clothes are stuck.	Close the door properly and restart. Check the laundry.
Door can't be opened	Safety protection is activated.	Disconnect the power and restart.
Water leakage	Connections are not tight enough.	Check and fasten the water inlet pipe. Check and clean the outlet hose.
Detergent residues in the detergent dispenser	Detergent is damp and/or clotted.	Clean and wipe the detergent dispenser dry.
Indicator or display does not work	PC board or harness have connection problems.	Switch off the power and check if the mains plug is connected properly.
Abnormal noise	Fixing bolts still in place. Floor is not solid or level.	Check if the fixing bolts have been removed. Make sure the appliance is installed on a solid and level floor.

#### Error Codes

Description	Possible cause	Solution
<b>E30</b>	Door is not closed properly.	Close the door properly and restart.
<b>E10</b>	Water injecting problem during wash cycle.	Check if the water pressure is high enough. Straighten the water pipe. Clean the inlet valve filter.
<b>E21</b>	Overtime water draining	Check the drain hose for blockage.
<b>E12</b>	Water overflow	Restart the appliance.
<b>EXX</b>	Others	Restart the appliance. If problem persists, please contact the customer service.

## 4 MAINTENANCE

---

### ■ 4.3 Customer Service

Spare part for your appliance are available for a minimum of 10 years following EU COMMISSION REGULATION 2019/2023 ANNEX II Ecodesign requirements..

In case of questions, please contact our local customer service center.



#### **Warning!**

Risk of electric shock


- Never try repair an appliance which is defective or presumed to be defective. You may put your own and future users' lives in danger. Only authorised specialists are allowed to carry out this repair work.
- Improper repair will void the warranty and subsequent damages can't be recognized!

### **Transport**

#### IMPORTANT STEPS WHEN MOVING THE APPLIANCE

- Unplug the appliance and close the water inlet tap.
- Check, if the door and the detergent dispenser are closed properly.
- Remove the water inlet pipe and the outlet hose from the house installations.
- Let the water drain completely from the appliance (see "Maintenance Cleaning the drain pump filter")
- Important: Re-install the 4 transport bolts in the back of the appliance.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door can not be used as a handle.

## 5 TECHNICAL SPECIFICATION

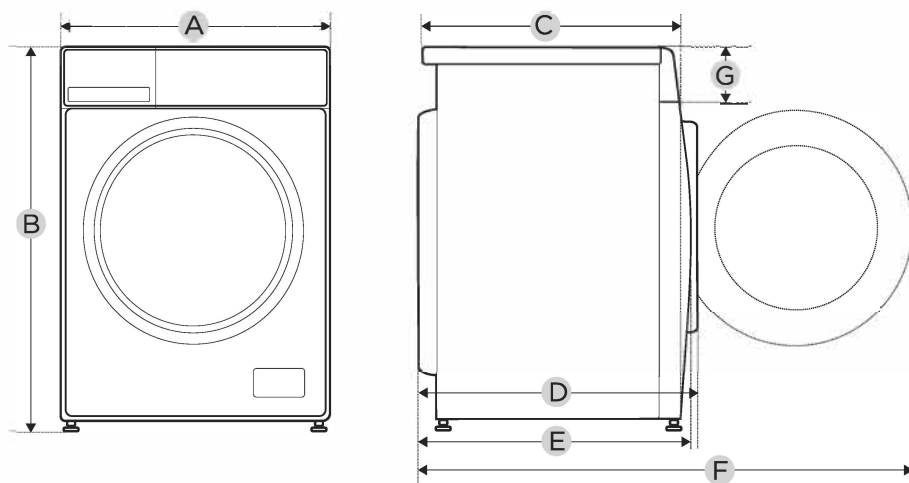

Model	WFB424QWA
Power Supply	220-240V~,50Hz
MAX.Current	10A
Standard Water Pressure	0.05MPa-1MPa
Washing Capacity	12.0kg
Dimension	
A	595mm
B	850mm
C	535mm
Weight	71 kg
Rated Power	1950W
Reference Dimension	
D	659mm
E	641mm
F	1105mm
G	135mm





This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the European Union.



For more information, please contact the local authority or your retailer where you purchased the product.